
Frion\*

## **Shower Head Filter**

## How to Set Up the Filter

Detach the shower head from the hose.

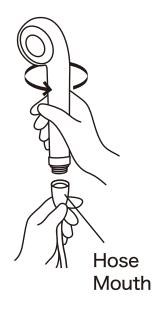

2 Attach the shower filter housing to the shower head. Tighten by hand.



Attach the hose to the bottom of the shower filter housing.



4 Turn on the water and check for leaks.


Frion.

## Replacement Cartridge

How to Replace the Cartridge



- 1 Place the washer inside the shower filter housing.
- Insert the replacement cartridge so that the end with the hole faces the washer.
- Place the rubber ring on the cartridge so that the protrusion touches the cartridge.
- 4 Tighten the cap.
- Make sure the rubber ring is properly set inside the cap.
- 6 Attach the shower and the hose.
- 7 Turn on the water and check for leaks.
- We recommend that you change the cartridge if you do not use the shower for a while (about 1 month).
- Please replace the cartridge if it smells bad or gets extremely dirty.
- The life of the cartridge may vary depending on water quality, the amount of water used, and the environment.

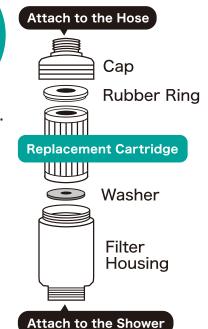

## **A** Caution

Check the top and bottom of the shower filter housing when you replace the cartridge.